

RAYNOX Camcorder Cross Reference Table for Telephoto Lens

2010/8/7
www.raynox.com

Camera Maker	Camera Model	HD-2205PRO (2.2x) / HD-2200PRO-LE(2.2x)	DCR-2025PRO(2.2x)	DVR-2021(2.0x)	HDP-7700ES(3.0x)	HDP-9000EX (1.8x)	DCR-1540PRO(1.54x / DCR-1541PRO(1.54x)	DVR-1002(0.65x+1.5x)	QC-180(1.8x)
SONY	HDR-FX1000(E)/AX2000(E), HVR-Z5(E)(U), HXR-NX5(U)(E)					Direct mount			
	HDR-FX7(E), HVR-V1(U)(E)(N)		Direct mount			RA7262	RA5262A		
	HDR-CX7(E)(EK)(K)(KE)/CX6EK	Direct mount	RA6252(Included)+RA5237A	Direct mount			RA5237A	Direct mount	Direct mount
	HDR-UX20	RA3730(Included)			RA3730(Included)				
	HDR-UX1	RA3730(Included)		RA3730(Included)				RA3730(Included)	RA3730
	HDR-SR12(E)/SR11(E)/CX12(E)	Direct mount	RA6252(Included)+RA5237A			Direct mount		RA5237A	
	HDR-SR8(E)/SR7(E)	Direct mount	RA6252(Included)+RA5237A	Direct mount	Direct mount		RA5237A	Direct mount	Direct mount
	HDR-SR1	RA3730(Included)		RA3730(Included)				RA3730(Included)	RA3730
	HDR-HC3	RA3730(Included)		RA3730(Included)	RA3730(Included)			RA3730(Included)	RA3730
	HVR-Z7(E)/S270(E)						Direct mount		
	HXR-MC1	RA3730(included)							
	HDR-FX1, HVR-Z1(U)(E)						Direct mount		
	HDR-HC9(E)/HC7(E)/CX7/UX7(E)	Direct mount	RA6252(Included)+RA5237A	Direct mount	Direct mount			RA5237A	Direct mount
	HDR-HC1, HVR-A1	Direct mount	RA6252(Included)+RA5237A		Direct mount			RA5237A	Direct mount
	HDR-CX110/150/155E/116E/115E, HD-XR150/155E	RA3730(Included)				RA3730(Included)			
	HDR-XR100(E)/105(E)/CX100(E)/105(E)	RA3730(Included)				RA3730(Included)			
	HDR-CX300/305E/350V(E)/XR350V(E)	RA3730(Included)				RA3730(Included)			
	HDR-XR500V(E)/520V(E), CX500V(E)/520V(E)	Direct mount				Direct mount			
	HDR-CX550V(E)/XR550V(E)	Direct mount	RA6252(Included)+RA5237A			Direct mount			
	DCR-DVR508/DVD908(E)	Direct mount	RA6252(Included)+RA5237A	Direct mount				RA5237A	Direct mount
	DCR-DVD405/403/505	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-DVD308/ DVD708(E)	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-SR300(C)(E)	Direct mount	RA6252(Included)+RA5237A	Direct mount				RA5237A	Direct mount
	DCR-SR62(E)	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-SR100/SR60	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-HC62(E) /DVD810	RA3730(Included)				RA3730(Included)			
	DCR-HC96/90	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-HC48	RA3730(Included)			RA3730(Included)				RA3730(Included)
	DCR-VX2100/2000/PD-170/PD-150/DSR-250		RA6258(Included)					RA5258A	
	DCR-VX1000								
DCR-TRV950/PDX10		RA6252(Included)+RA5237A					RA5237A		
PMW-EX1(E)/EX1R(E)						RA7277			
Canon	HF11/10/100/HG21	Direct mount			Direct mount				
	HF M30/31/32/36/300/306	Direct mount			Direct mount				
	HF20/21	Direct mount			Direct mount				
	HF S10/11/100		RA6258(Included)				RA5258A		
	HF S20/21/200		RA6258(Included)						
	XH G1/XH A1					Direct mount			
	XL1/XL2/XL H1 16X·20X Zoom					Direct mount			
	HV30/HV20/HG10	RA3743(Included)	RA6252(Included)+RA5243A		RA3743(Included)*7		RA5243B		
	HV10	Direct mount		Direct mount				Direct mount	
	HR10	Direct mount	RA6252(Included)+RA5237A	Direct mount	Direct mount*7		RA5237A	Direct mount	Direct mount
	DM-DC40	Direct mount			Direct mount			Direct mount	Direct mount
	DM-DC20	RA3727P5(Included)			RA3727P5(Included)			RA3727P5(Included)	RA3727P5
	DM-FV500(ZR 100/MV 790/800/800i)	RA3728P5			RA3728P5			RA3728P5	RA3728P5
	IXY DV M5(Optura 600A/MVX iE)	RA3734P5			RA3734P5			RA3734P5(Included)	Direct mount
	IXY DV S1(Optura S1/MVX1Si)	RA3727P5(Included)			RA3727P5(Included)			RA3727P5(Included)	RA3727P5
	IXY DV5(Elura 50/MV 6iMC)/DV3(Elura 40MC/MV5iMC)	RA3728P5			RA3728P5			RA3728P5	RA3728P5
	FV M300(Elura 100/MVX 430/450/460)	RA3727P5(Included)			RA3727P5(Included)			RA3727P5(Included)	Direct mount
	FV M1(Optura Xi/MVX3i)								
	XV-1(GL1/XM1)/XV-2(GL2/XM2)		RA6258(Included)					RA5258A	
	PV130								

*1:Vignetting occurs at 4:3 Still mode *2:Vignetting occurs at Still/Video/under scanning mode *3:Remove camera's cosmetic ring or hood before attaching the Raynox lens *5:Vignetting occurs at Still mode *6:Vignetting occurs at under scanning mode *7:Set the camera's f-stop at f/2.8 when used with HV20/HG10/HR10 camera.Taking an image when the camera's aperture opening of F3.4 or slower than F3.4 may increase vignetting

Remote control function and internal video light/Flash may not work properly with conversion lens attached.

Copyrights Y.I.C. All Rights Reserved

We are not responsible for potential errors

RAYNOX Camcorder Cross Reference Table for Telephoto Lens

Camera Maker	Camera Model	HD-2205PRO (2.2x) / HD-2200PRO-LE(2.2x)	DCR-2025PRO(2.2x)	DVR-2021(2.0x)	HDP-7700ES(3.0x)	HDP-9000EX (1.8x)	DCR-1540PRO(1.54x)/DCR-1541PRO(1.54x)	DVR-1002(0.65x+1.5x)	QC-180(1.8x)
Panasonic	HDC-SD1/DX1, AG-HSC1U	RA3743(Included)			RA3743(Included)*2*3				
	HDC-SD9/HS9/SD5/SD5EG/SX5	Direct mount *3			Direct mount *3		RA5237 *3		
	HDC-SD100/HS100	Direct mount *3			Direct mount *3				
	HDC-TM30	RA37305P5(Included)			RA37305P5(Included)				
	HDC-SD700/HS700(K)/TM700(K)/SDT750(K)						RA5246		
	HDC-HS300/350/200, TM300/350/SD200	RA3743(Included)	RA4343A+RA6243(Included)		RA3743(Included) *7				
	AG-HCK10G	RA3743(Included)							
	AG-HMC150/151/155, AG-HPX170/175						Direct mount		
	AG-DVX100(A)(AE)(AP)(B)(BE)(BP)						Direct mount		
	AG-HVX200(E)(MC)(P)/HVX202EN						RA7282		
	VDR-D310	Direct mount			Direct mount				Direct mount
	VDR-D400	RA3743(Included)			RA3743(Included)				RA3743(Included)
	VDR-D300/D250	Direct mount			Direct mount				Direct mount
	SDR-S100/S200	Direct mount*3			Direct mount*3				Direct mount*3
	NV-GS320	Direct mount			Direct mount				Direct mount
	NV-GS500/400	RA3743(Included)*3			RA3743(Included)*3				RA3743(Included)*3
	NV-GS300	Direct mount			Direct mount				Direct mount
	NV-GS250	RA3743(Included)*3			RA3743(Included)*3				RA3743(Included)*3
VDR-M30K									
NV-GS55/GS50									
JVC	GZ-HM400		RA6252(Included)+RA5246						
	GZ-HM550(BEK)	Direct mount			Direct mount				
	GZ-HM1(SEK)						RA5246		
	GZ-HD620	Direct mount			Direct mount				
	GZ-HD300/HD320	RA37305P5(Included)			RA37305P5(Included)				
	GZ-HD40/HD30	RA3743(Included)	RA6243(Included)		RA3743(Included)				
	GZ-HD5/HD6	RA3743(Included)	RA6243(Included)		RA3743(Included)				
	GZ-HD3/HD7	RA3746	RA6252(Included)+RA5246				RA5246		
	GZ-MG880/MG840	RA37305P5(Included)			RA37305P5(Included)				
	GZ-MG275/MG255	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
	GZ-MG575/MG555		RA6252(Included)+RA5246				RA5246		
	GZ-MG505	Direct mount*3			Direct mount*3				Direct mount*3
	GZ-MG77/MG67/MG70/MG50/MG40	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
	GZ-MG47	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
	GR-D650	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
	GR-D350	RA3727P5(Included)			RA3727P5(Included)				RA3727P5
	GR-D250	RA3727P5(Included)			RA3727P5(Included)				RA3727P5
	GZ-MC500	Direct mount			Direct mount				Direct mount
	GZ-MC200/MC100	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
	GR-DV3000/DV3500								
	GR-DV5000								
	GR-DV900K/DV700K								
GR-DV500									
GR-X5									
HITACHI	DZ-BD10H/10HA	RA3743(Included)	RA6243(Included)		RA3743(Included)*5		RA5243B		
	DZ-BD7(H)(HA)(HE), DZ-BD70(A)(E)	RA3743(Included)*5			RA3743(Included)*5				RA3743(Included)*5
	DZ-GX3300	Direct mount			Direct mount				Direct mount
	DZ-GX3200	RA3734P5*3			RA3734P5*3				RA3734P5(Included)*3
	DZ-GX3100	RA37305P5(Included)			RA37305P5(Included)				RA37305P5
TOSHIBA	GSC-R60/R30/MEHV10	RA37305P5(Included)			RA37305P5(Included)				RA37305P5

*1:Vignetting occurs at 4:3 Still mode *2:Vignetting occurs at Still/Video/under scanning mode *3:Remove camera's cosmetic ring or hood before attaching the Raynox lens *5:Vignetting occurs at Still mode *6:Vignetting occurs at under scanning mode *7:Set the camera's f-stop at f/2.8 when used with HV20/HG10/HR10 camera.Taking an image when the camera's aperture opening of F3.4 or slower than F3.4 may increase vignetting

Remote control function and internal video light/Flash may not work properly with conversion lens attached.